

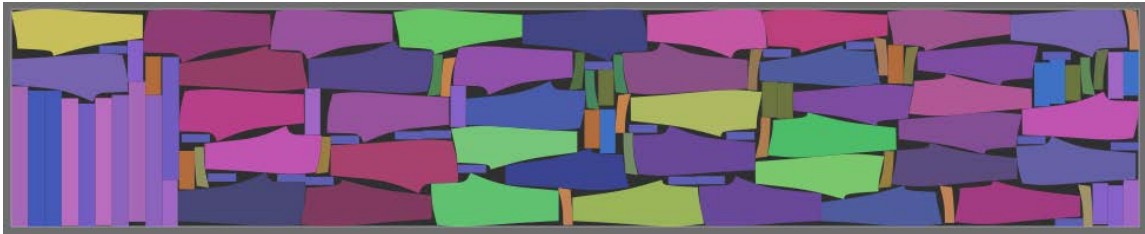
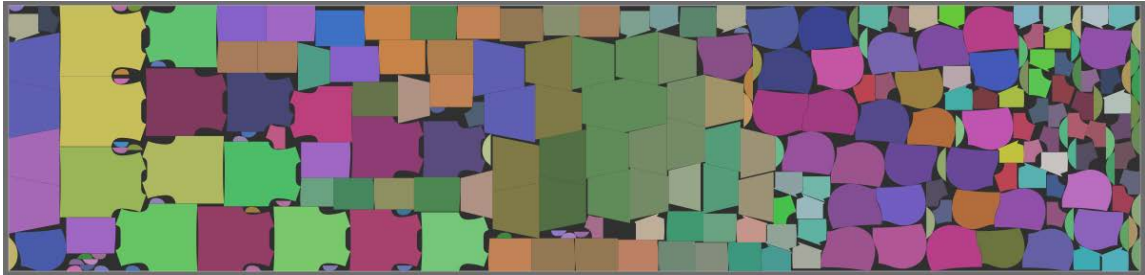
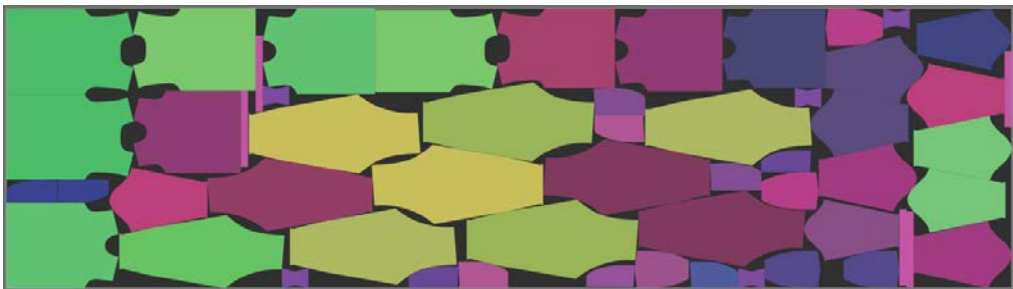
yotuNester-T VS AutoNester-T 利用率对比测试

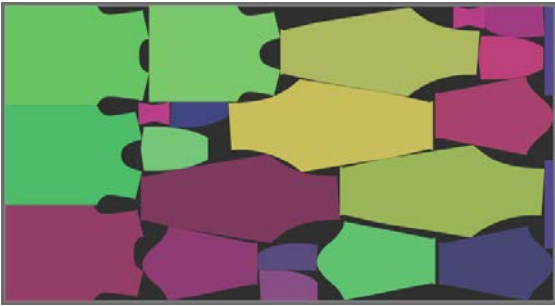
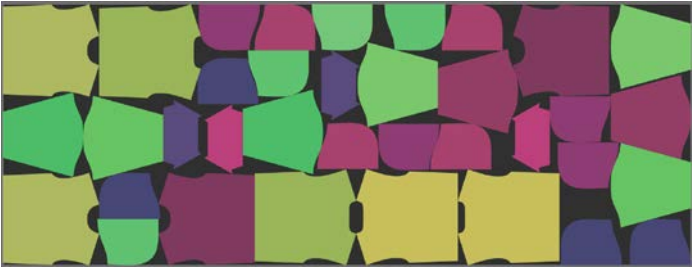
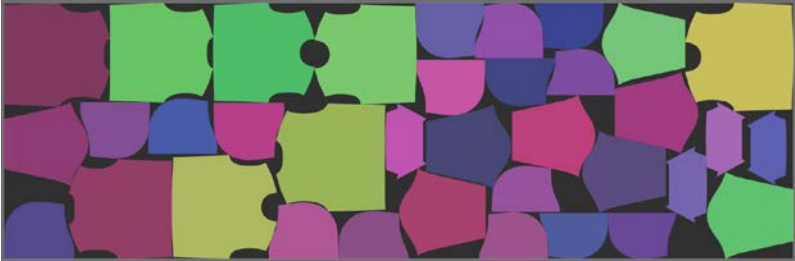
硬件:

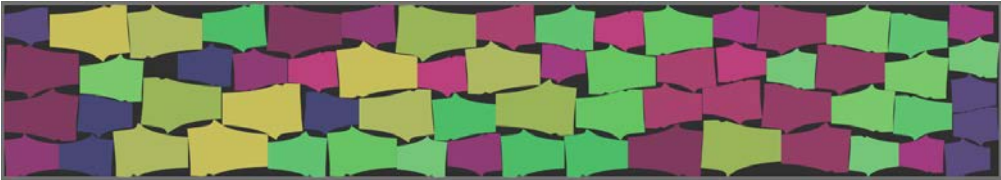
AutoNester-T 客户提供全部结果数据, 具体硬件未知, 据称高配, 测试时间 5-10 分钟/每个测例

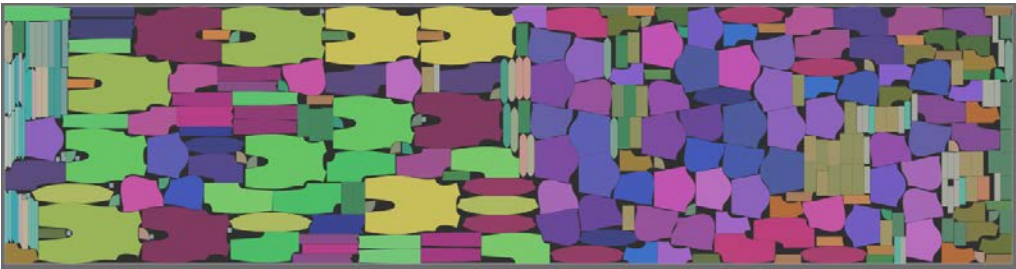
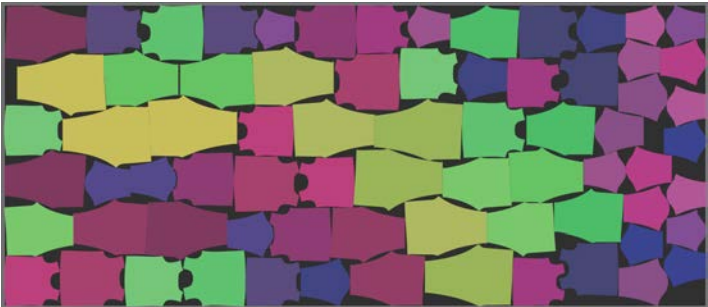
yotuNester-T case 1- 40 10700(默频); case 41 - 67 AMD1700

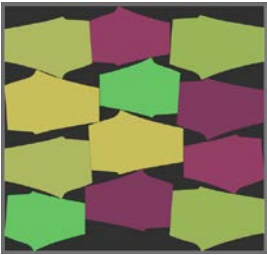
保持幅宽/可旋转角度/裁片间距与 AutoNester-T 测试条件一致

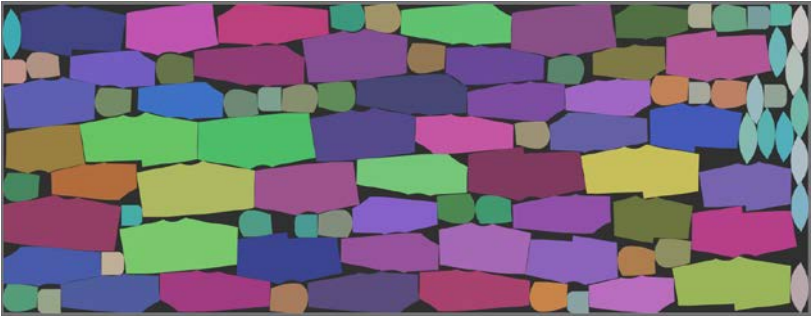
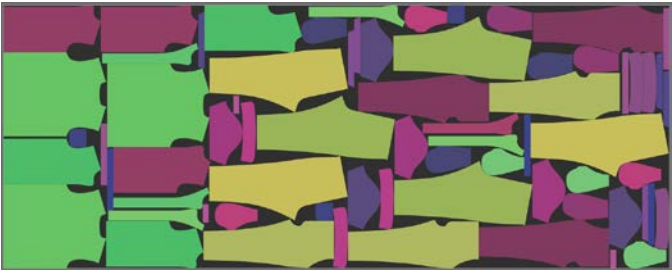
NO.	AutoNester-T (德国)	yotuNester-T 上海友图科技	Improve
1	86.42%	86.10% 5 分钟 可旋转 180 裁片数 50 	-0.32%
2	88.91%	88.68% 5 分钟 不旋转 裁片数 110 	-0.23%
3	91.51%	90.18% 10 分钟 可旋转 180 裁片数 240 	-1.33%
4	87.83%	85.08% 10 分钟 可旋转 180 裁片数 112 	-2.75%
5	85.81%	88.10% 5 分钟 可旋转 180 裁片数 55 	+2.29%

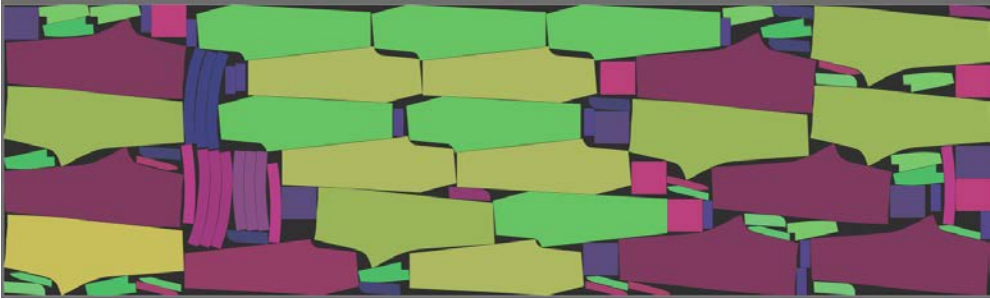
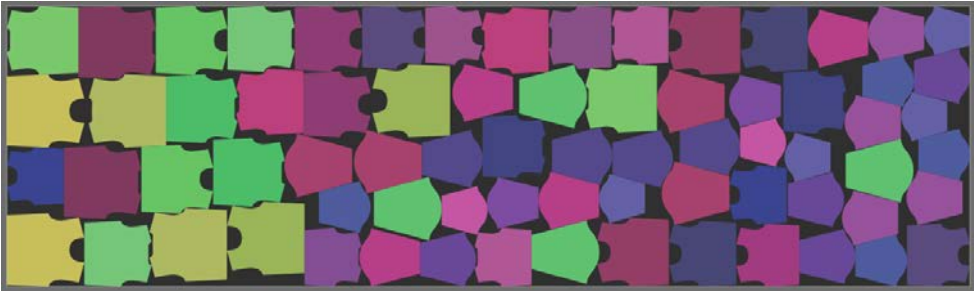
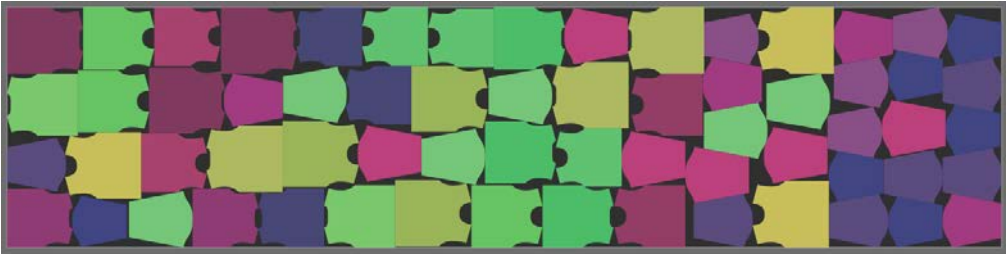
6	86.36%	86.83% 2 分钟 可旋转 180 裁片数 22	+0.47%
			
7	89.19%	89.49% 5 分钟 可旋转 180 裁片数 68	+0.30%
			
8	79.43%	80.40% 5 分钟 不可旋转 裁片数 72 裁片间距 2mm	+0.97%
			
9	85.78%	85.40% 4 分钟 不可旋转 裁片数 36	-0.38%
			
10	86.55%	85.26% 4 分钟 不可旋转 裁片数 36	-1.29%
			
11	80.60%	80.15% 3 分钟 不可旋转 裁片数 20	-0.45%
			

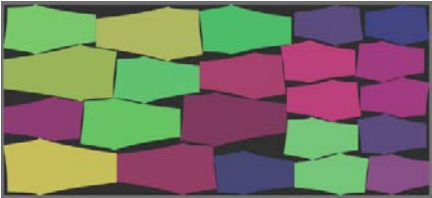
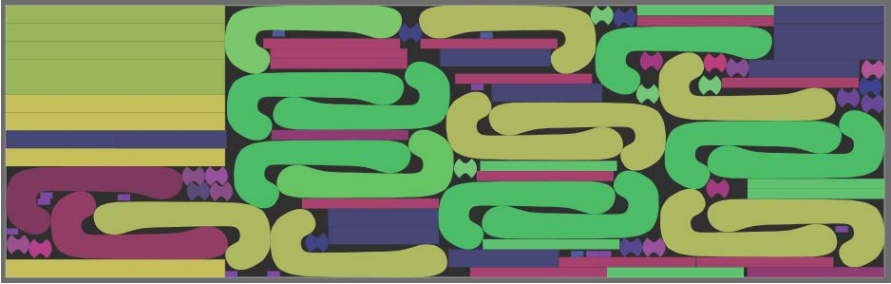
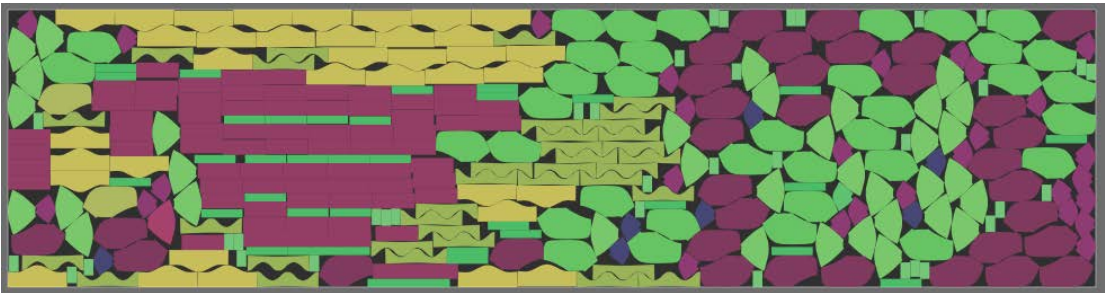
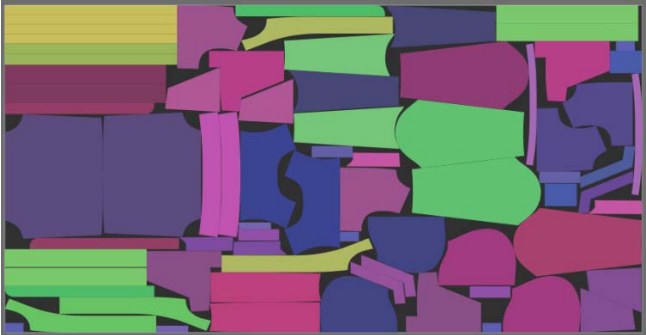
12	86.45%	85.06% 3 分钟 不可旋转 裁片数 32		-1.39%
13	88.81%	88.80% 5 分钟 可旋转 180 裁片数 88		-0.01%
14	86.49%	86.02% 10 分钟 可旋转 180 裁片数 88		-0.47%
15	88.98%	88.38% 10 分钟 不可旋转 裁片数 160 裁片间距 1mm		-0.60%
16	84.61%	83.63% 5 分钟 可旋转 180 裁片数 128		-0.98%
17	84.58%	83.48% 5 分钟 可旋转 180 裁片数 64		-1.10%
18	89.95%	89.57% 10 分钟 可旋转 180 裁片数 100		-0.38%

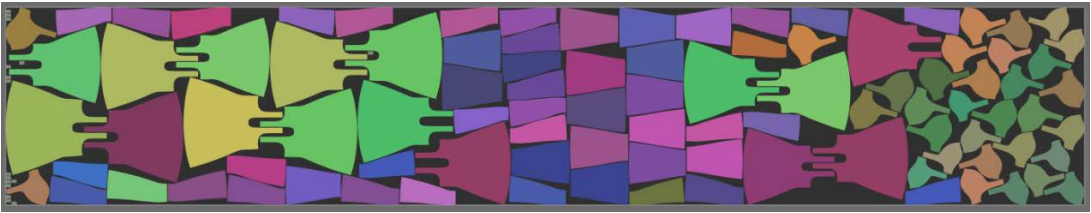
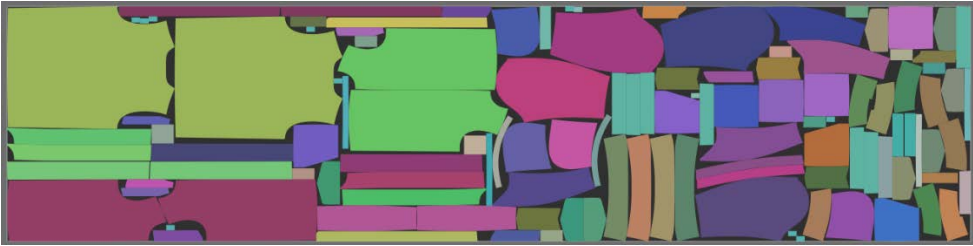
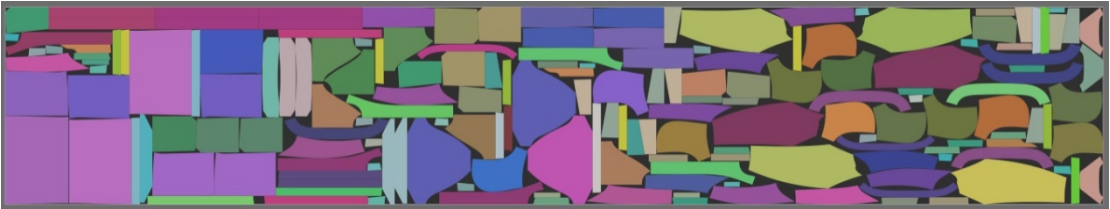
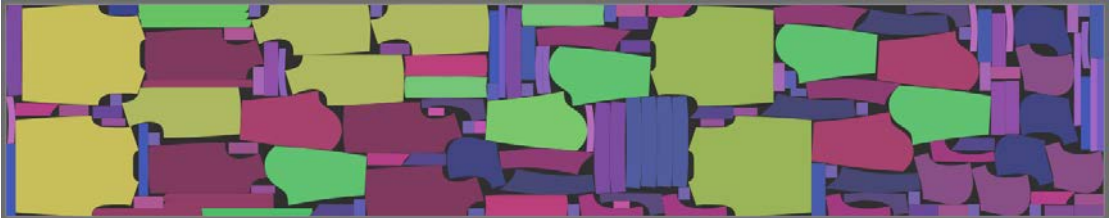
19	89.11%	87.26% 5 分钟 可旋转 180 裁片数 63		-1.85%
20	89.37%	89.15 3 分钟 可旋转 180 裁片数 48		-0.22%
21	82.68%	81.44% 3 分钟 可旋转 180 裁片数 36		-1.24%
22	84.23%	82.78% 5 分钟 可旋转 180 裁片数 48		-1.45%
23	89.10%	88.94% 5 分钟 可旋转 180 裁片数 324		-0.16%
24	85.64%	85.66% 5 分钟 可旋转 180 裁片数 72		+0.02%

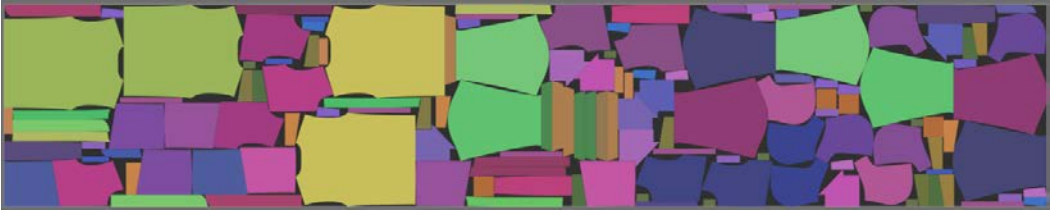
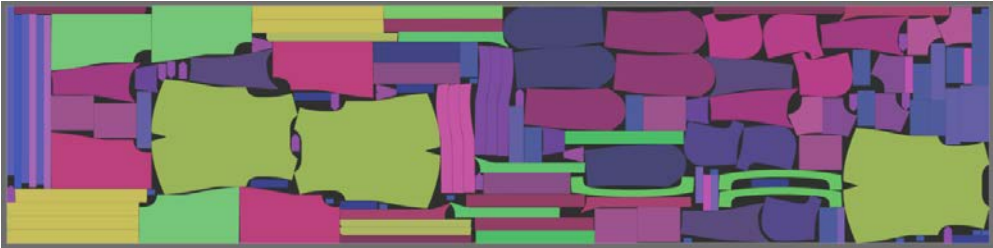
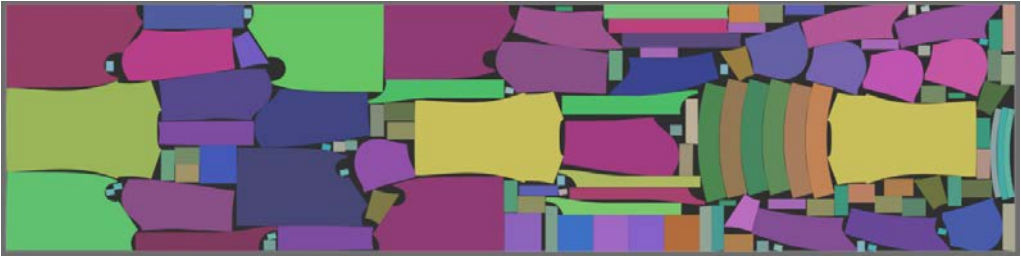
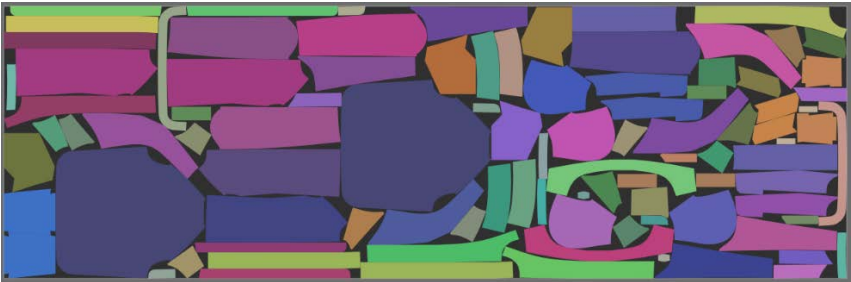
25	85.85%	85.68% 3 分钟 可旋转 180 裁片数 52		-0.17%
26	87.14%	86.95% 5 分钟 可旋转 180 裁片数 40		-0.19%
27	76.10%	76.11% 2 分钟 (10 秒 76.07%) 可旋转 180 裁片数 12		+0.01%
28	89.12%	88.50% 5 分钟 可旋转 180 裁片数		-0.62%
29	89.27%	88.97% 5 分钟 可旋转 180 裁片数 70		-0.30%
30	87.82%	87.50% 5 分钟 可旋转 180 裁片数 64		-0.32%
31	81.89%	81.06% 5 分钟 可旋转 180 裁片数 51		-0.83%

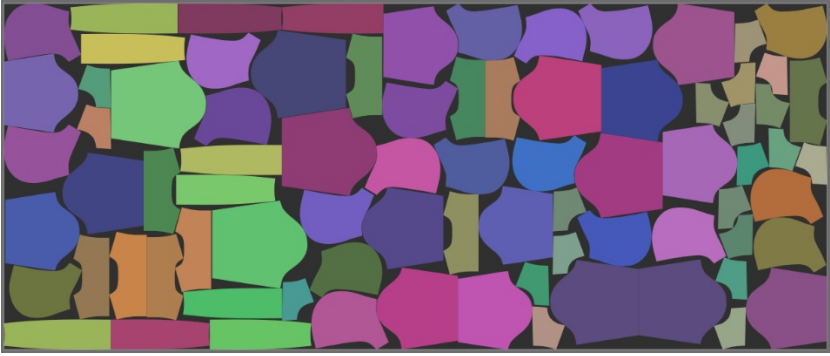
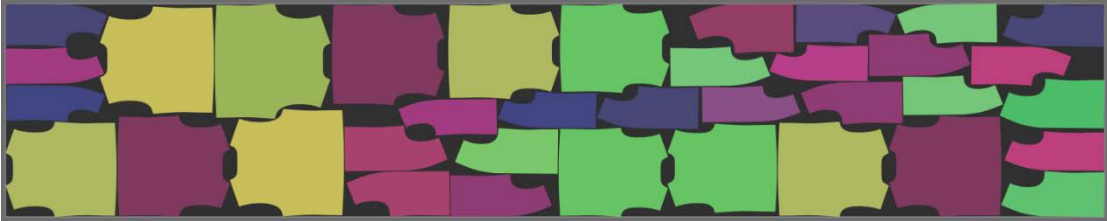
32	88.11%	87.80% 5 分钟 可旋转 180 裁片数 96 间距 0.2mm 	-0.31%
33	88.91	88.07% 5 分钟 可旋转 180 裁片数 96 间距 0.2mm 	-0.84%
34	84.53%	84.71% 5 分钟 不可旋转 裁片数 69 	+0.18%
35	85.84%	87.55% 1 分钟 可旋转 180 裁片数 20 	+1.71%
36	79.94%	79.93% 2 分钟 可旋转 180 裁片数 24 	-0.01%
37	87.84%	88.76% 5 分钟 可旋转 180 裁片数 150 	+0.92%

38	89.04%	88.09% 5 分钟 不可旋转 裁片数 48 间距 2mm		-0.95%
39	88.71%	88.92% 5 分钟 不可旋转 裁片数 96 间距 1mm		+0.21%
40	81.29%	79.25% 5 分钟 可旋转 180 裁片数 48		-2.04%
41	87.03%	84.32% 不可旋转 裁片数 72		-2.69%
42	89.07%	87.70 不可旋转 裁片数 64		-1.37%
43	82.12%	80.66% 不可旋转 裁片数 48		-1.46%
44	83.87%	80.71% 5 分钟 不可旋转 裁片数 48		-3.16%

45	84.08%	83.74% 2 分钟 可旋转 裁片数 22	-0.34%
			
46	85.1%	83.21% 5 分钟 不可旋转 裁片数 32	-1.89%
			
47	87.29%	87.31% 可旋转 180 裁片数 96	+0.02%
			
48	88.61%	86.61% 10 分钟 可旋转 裁片数 360	-2.00%
			
49	90.51%	89.13% 5 分钟 不可旋转 裁片数 140	-1.38%
			
50	89.73%	89.29% 5 分钟 可旋转 180 裁片数 76	-0.44%
			

51	87.69%	86.90% 5 分钟 可旋转 180 裁片数 58		-0.79%
52	90.30%	87.92% 5 分钟 不可旋转 56		-2.38%
53	79.25% 不 清 楚 AutoNester-T 是否使用了 180 旋转	79.40% 5 分钟 不可旋转 裁片数 112 间距 4mm		+0.15%
54	86.60%	86.10% 5 分钟 可旋转 180 裁片 66		-0.50%
55	91.52%	90.97% 5 分钟 可旋转 180 裁片数 118		-0.55%
56	89.86%	88.48% 5 分钟 不可旋转 裁片数 174		-1.38%
57	90.55%	90.09% 10 分钟 不可旋转 144		-0.46%

58	91.40%	90.62% 5 分钟 不可旋转 136		-0.78%
59	91.88%	91.20% 10 分钟 不可旋转 裁片数 168		-0.68%
60	91.14%	90.71% 5 分钟 可旋转 180 裁片数 141		-0.43%
61	83.78%	83.90% 3 分钟 可旋转 180 裁片数 28		+0.12%
62	85.12%	85.24% 5 分钟 可旋转 180 裁片数 54		+0.12%
63	91.06%	90.86% 5 分钟 旋转 180 裁片数 126		-0.20%
64	88.30%	87.77% 5 分钟 可旋转 180 裁片数 96		-0.53%

65	86.37%	85.64% 5 分钟 可旋转 180 裁片数 80	-0.73%
			
66	89.33%	89.05% 5 分钟 可旋转 180 裁片数 189	-0.28%
			
67	83.51%	82.82% 5 分钟 可旋转 180 裁片数 36	-0.69%
			
	分布统计	> +1.5% 2 (+0.5%, +1.5%) 2 (0, +0.5%) 10 (-0.5%, 0) 22 (-1.5%, -0.5%) 23 < -1.5% 8	
全部		总计: -40.80% 平均: $-40.80/67 = -0.61\%$	